



**MB602SPO-B**  
2 x 2.5" + (Ultra) Slim ODD

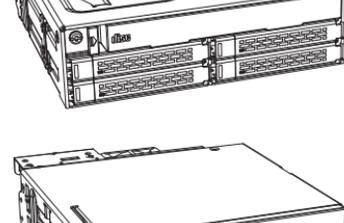

**MB604SPO-B**  
4 x 2.5" + (Ultra) Slim ODD

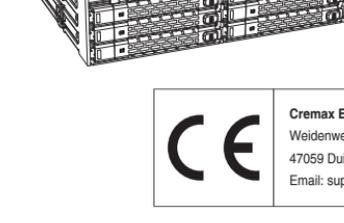

**MB606SPO-B**  
6 x 2.5" + Ultra Slim ODD



Cremax Europe GmbH  
Weidenweg 21H  
47059 Duisburg, Germany  
Email: support@icydock.com

Copyright © ICY DOCK International. All Rights Reserved. 6502702 VER 3.0

### 1

#### Package Contents • Packungsinhalt • Contenu • Contenido del paquete • 包装について • 包装説明 • 包装说明



MB602SPO-B




MB604SPO-B




MB606SPO-B




User manual




2 x M2\*2.5 screws for ODD  
(2 x screws for spare parts)



8 x M3\*2.5 screws for device  
(2 x screws for spare parts)




24 x M3\*4 screws for 2.5" HDD /  
SSD (2 x screws for spare parts)



MB602 & MB604  
Optional  
EVA foam spacer /  
Spacer installation guide



MB602 & MB604  
8 x M3\*4 screws for 2.5" HDD /  
SSD (2 x screws for spare parts)




MB604 & MB606  
Drive ID plugs

Note: Please use the included screws to secure the drive(s).


### 2

#### Device Information • Geräteinformationen • Informations dispositif • Información del dispositivo • 本体説明 • 機體説明 • 机体说明


##### ▼ Front View

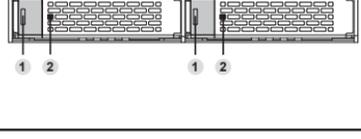

(MB602SPO-B)

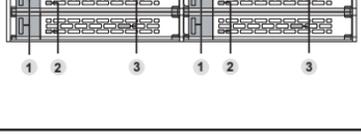


(MB604SPO-B)

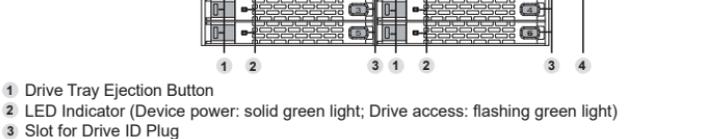


(MB606SPO-B)

- 1 Drive Tray Ejection Button
- 2 LED Indicator (Device power: solid green light; Drive access: flashing green light)
- 3 Slot for Drive ID Plug
- 4 (Ultra) Slim ODD Bay Dust Cover Plate / (Ultra) Slim ODD Slot


##### ▼ Rear View

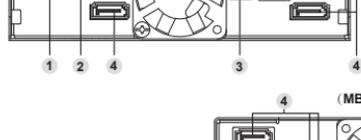

(MB602SPO-B)

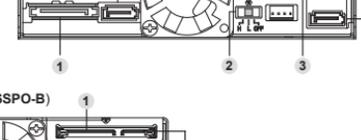

(MB604SPO-B)



(MB606SPO-B)

- 1 15 Pin Power Port
- 2 Fan Speed Switch Control
- 3 3 Pin Fan Header Port
- 4 7 Pin SATA Port

### 3

#### 2.5" HDD/SSD Installation • Installation einer 2.5" HDD/SSD • Installation du disque dur/SSD 2.5" • Instalación de unidad de disco duro o unidad de estado sólido de 2.5" • 2.5" HDD/SSD取付手順 • 2.5吋硬碟安裝步驟 • 2.5吋硬盘安裝步驟

##### MB602SPO-B

###### 3-1.1



Push the drive tray ejection button to eject the drive tray.

###### 3-1.2



The drive tray latch will pop open once the drive tray ejection button is pushed.

###### 3-1.3




Pull the drive tray out from the device.

###### 3-1.4




Flip the drive tray and drive upside down and insert the 2.5" drive into the tray, be sure that the drive's connector is located at the rear of the tray.

###### 3-1.5



Use the included M3\*4 screws to secure the drive onto the tray, then flip the tray back to the top side.

###### 3-1.6



Insert the drive tray all the way into the device.

##### Note:

The 2.5" HDD/SSD installation of MB604SPO-B and MB606SPO-B is similar to MB602SPO-B, except step 3-1.4 and 3-1.5 which will be illustrated in the following section.

##### MB604SPO-B

###### 3-2.4



Please do not discard the removed screws, as it is for SSD/HDD mounting purposes.

###### 3-2.5



Use the included M3\*4 screws to secure the drive onto the tray, then flip the tray back to the top side.


##### MB606SPO-B

###### 3-3.4



Please do not discard the removed screws, as it is for SSD/HDD mounting purposes.

###### 3-3.5



Use the included M3\*4 screws to secure the drive onto the tray, then flip the tray back to the top side.

##### MB604SPO-B & MB606SPO-B Only

##### OPTIONAL: Installing Drive ID Plugs

To install Drive ID Plugs, gently twist off the plug from the Drive ID Plugs mold and insert it into the drive ID plug slot in front of the tray.



### 4

#### Ultra Slim / Slim ODD Installation • Optisches Ultra Slim / Slim Laufwerk installieren • Installation de lecteur de disque optique ultrafin • Installation de lecteur Ultra Slim ODD / Slim ODD • スリムタイプ ODD デバイスの取付手順 • 超薄型 / 薄型光碟機安裝步驟 • 9.5mm / 12.7mm 笔记本光驱安裝步驟

##### MB602SPO-B

###### 4-1.1



To remove the ODD dust cover, push the tab to the right to unlatch.

###### 4-1.2




Unscrew the screw on the front panel to remove the ODD bracket.

###### 4-1.3



Remove the ODD bracket from the device.

###### 4-1.4




Use two M2\*2.5 screws to secure slim ODD onto the ODD bracket.

##### Optional: Ultra Slim ODD spacer installation for MB602SPO-B & MB604SPO-B

Use the provided ODD spacer installation guide to correctly install the EVA foam spacer on top of the Ultra Slim ODD.

1. Place the ODD spacer installation guide on top of Ultra Slim ODD (as shown in the picture).
2. Follow the ODD spacer installation guide and then attach the EVA foam on the Ultra Slim ODD.

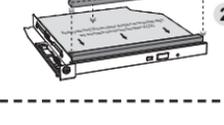

###### 4-1.5



Insert the ODD bracket back into the device.

###### 4-1.6



To secure ODD device, tighten the screw on the front panel.

##### Note:

The Ultra Slim / Slim ODD installation of MB602SPO-B & MB604SPO-B is similar to MB606SPO-B except step 4-1.4 and 4-1.5 which will be illustrated in the following section.

##### MB606SPO-B

###### 4-3.4



Use two M2\*2.5 screws to secure slim ODD onto the ODD bracket.

###### 4-3.5



##### Note:

In order to provide sufficient power to device, we suggest to use power cables that are not shared with other devices.

